



Amplified Indoor TV Antenna

Your RadioShack Amplified Indoor TV Antenna provides excellent reception of VHF and UHF broadcast TV channels and FM radio stations in most listening locations. This antenna receives signals equally well from any direction, and its built-in amplifier helps boost the signal for better reception. You can connect the antenna's 75-ohm connector directly to your TV or FM receiver. The antenna's compact, modern styling blends well with the decor of almost any home. The antenna lies flat on top of your TV, letting you locate it inconspicuously.

Warning: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

	CAUTION RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.		



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

BEFORE YOU BEGIN

 
Be sure you locate and remove the antenna and AC adapter before you store or dispose of the packing material.

Depending upon your audio/video system setup, you might also need additional cables or adapters (available at your local RadioShack store).

PLACING THE ANTENNA


To get the best performance from your antenna, place it on top of your TV or on a non-metal flat surface near your TV. For the best results, make sure the antenna is away from obstructions such as metal cabinets. (Higher frequencies are noticeably affected by obstructions.) Do not place the antenna near any metal surface such as a refrigerator, a metal door or wall, or a water pipe hidden behind a wall. This greatly reduces the antenna's ability to receive signals.

If your TV does not have a large flat surface on its top, pull down the hinged foot on the bottom of the antenna and adjust it to fit the top of the TV. Then use the foot to brace the antenna on top of the TV.

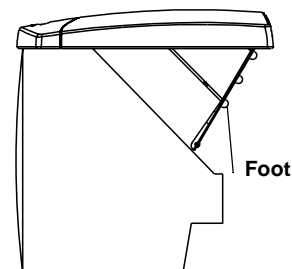

CONNECTING AND TUNING THE ANTENNA

 
1. Connect the 75-ohm coaxial cable attached to the back of the antenna to your TV's antenna input terminal or your radio's FM antenna input terminal.

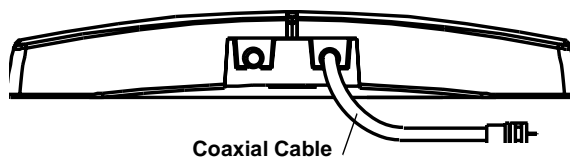


If your TV has screw terminals for VHF/UHF connection, connect a 75-to-300 ohm transformer (such as Cat. No. 15-1140, not supplied) between the coaxial cable and the VHF/UHF terminals.

If your TV has a 75-ohm VHF connector and a 300-ohm UHF connector, connect a signal splitter (such as Cat. No. 15-1231, not supplied) between the coaxial cable and the TV's VHF/UHF connector.

 2. Connect the supplied AC adapter's plug to 9 VDC on the back of the antenna, then plug the AC adapter into a standard AC outlet. The indicator on the top of the antenna lights.

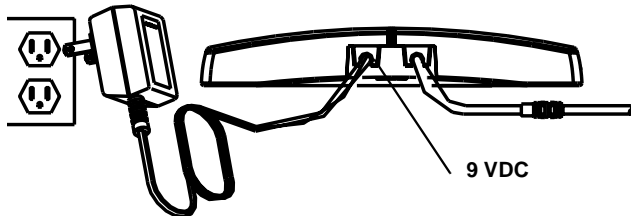

 3. Slide the gain control on top of the antenna to adjust the received signal.

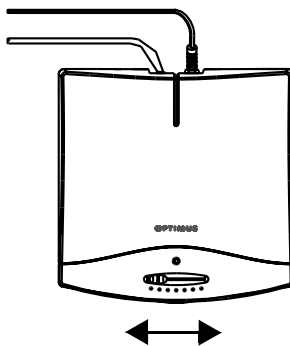

SPECIFICATIONS

Reception	FM, VHF, and UHF
Operating Bands	88–108 MHz, 54–890 MHz
Reception Direction	Omnidirectional
Signal Gain	Variable, up to 30 dB
Output Impedance	75 Ohms
Power Supply	120 VAC AC-to-9V DC Adapter
Dimensions (HWD)	1½ × 11 × 11 Inches (3.8 × 27.9 × 27.9 cm)
Weight (with AC adapter)	2.14 lb (0.97 kg)

Specifications are typical; individual units might vary.
Specifications are subject to change and improvement
without notice.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

We Service What We Sell

3/97

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102